

EN | Instruction manual

NL | Gebruiksaanwijzing

FR | Mode d'emploi

DE | Bedienungsanleitung

ES | Manual de usuario

PT | Manual de utilizador

IT | Manuele utente

SV | Bruksanvisning

PL | Instrukcja obsługi

CS | Návod na použití


SK | Návod na použitie

RU | Руководство по эксплуатации



BP-2831 | BP-2834 | BP-2958 | BP-2965
BP-2970 | BP-2984 | BP-2987

PARTS DESCRIPTION / ONDERDELENBESCHRIJVING / DESCRIPTION DES PIÈCES / TEILEBESCHREIBUNG / DESCRIPCIÓN DE LAS PIEZAS / DESCRIÇÃO DOS COMPONENTES / DESCRIZIONE DELLE PARTI / BESKRIVNING AV DELAR / OPIS CZĘŚCI / POPIS SOUČÁSTÍ / POPIS SUČASTÍ / ПИСАНИЕ ЗАПЧАСТИ

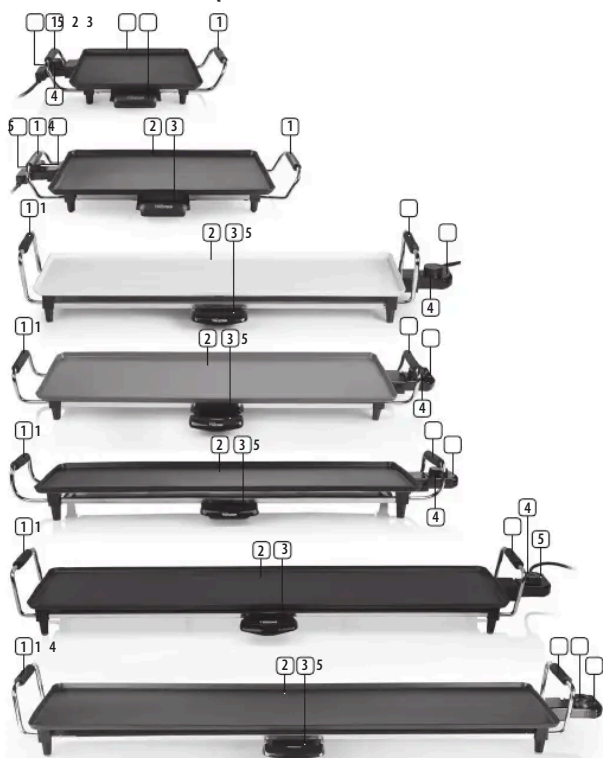

EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the appliance unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Only use the appropriate connector for this device.



This product complies with conformity requirements of the applicable European regulations or directives.



The Eurasian Conformity mark (EAC) is a certification mark to indicate products that conform to all technical regulations of the Eurasian Customs Union.



This symbol is used for marking materials intended to come into contact with food in the European Union as defined in regulation (EC) No 1935/2004.



The Green Dot is the registered trademark of Der Grüne Punkt – Duales System Deutschland GmbH and is protected as a trademark worldwide. The logo may only be used by customers of DSD GmbH holding a valid trademark usage contract or by engaged waste management companies within the Federal Republic of Germany. This also applies to reproduction of the logo by third parties in a dictionary, an encyclopaedia or an electronic database containing a reference manual.



Separate collection / Check your local municipal guidelines.



The product and packaging materials are recyclable, subject to extended manufacturer responsibility. Dispose it separately, following the illustrated packaging symbols, for better waste treatment. The Triman logo is valid in France only.



The universal recycling symbol, logo, or icon is an internationally recognized symbol used to designate recyclable materials. The recycling symbol is in the public domain and is not a trademark.

• Place the device in

USE

- Pre-heat your appli
- temperature indica
- The heating plate s
- Use the temperatur
- temperature.
- The thermostat reg
- indicator light will g
- constantly adjustin
- damage the anti-st

CLEANING AND MA

- Before cleaning, un
- down.
- Never pour cold wa
- can cause splashing
- Wipe the inside an
- soft cloth.
- Clean the appliance
- cleaners, scouring
- Remove and empty
- tray in warm, soapy
- The table grill is di
- table grill by hand

ENVIRONMENT



This appliance end of its durability, of electric and electr appliance, instruction important issue. The recycling of used do the protection of our regarding the point o

Support

You can find all avail

NL Gebru

VEILIGHEID

- Als u de veil
- fabrikant nie
- gehouden v
- Als het nets
- worden verv
- onderhouds
- personen m
- gevaar te v
- Verplaats he
- te trekken e
- kan raken.
- Het apparaa
- ondergrond
- De gebruike
- achterlaten
- aangesloten
- Dit apparaat
- gebruik en v
- is.
- Dit apparaat
- kinderen jon
- worden geb
- door person
- zintuiglijke o
- aan de beno
- onder toezic
- hoe het app
- worden geb
- die met het
- mogen niet
- apparaat en
- kinderen jon
- onderhoud r
- ze ouder zij
- Dompel het
- niet onder i
- elektrische s
- Houd het ap
- bereik van k
- De temperat
- oppervlakke



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or local store for recycling advice.

PARTS DESCRIPTION

1. Handles
2. Baking plate
3. Grease drain
4. Temperature control knob
5. Heat up indicator

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Install the handles with the supplied screws.
- Place a grease collecting tray below the grease drain.
- Place the supplied thermostat in the connection of the thermostat.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V~ 50/60Hz).
- Turn the thermostat clockwise to the highest setting and allow the device heating at least 5 minutes without food.
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This odour is only temporary and will disappear soon.
- We advise to place a heat resistant coating between your table and the appliance (this way you don't get burn marks on your table or table cloth).



WWW.TRISTAR.EU

Tristar Europe B.V. | Swaardvenstraat 65
5048 AV Tilburg | The Netherlands

- apparaat in
- Het apparaat worden met een afzonde
 - Gebruik uits apparaat.



Dit product is in overeenstemming met de Europese



Het Euraziatische certificeringsmerk om technische voorschriften



Dit symbool is bestemd zijn om in a zoals gedefinieerd in



The Green Mark is a dual system of a protected trademark for customers of DSD Green Mark trademark usage

