

Instruction for use eufy Robot Omni E25

Contact Us

Phone:

USA: +1-800-994-3056

Mon-Fri 6:00AM - 5:00PM (PT)

Sat 7:00AM - 3:30PM (PT)

UK: +44 (0) 1604 936 200

Mon-Fri 9:00AM-5:00PM (GMT)



Email: support@eufy.com

(We will respond to you within 24 hours on workdays.)


Contents:

1. How can I optimize Omni E25's cleaning performance? (2-3)
2. How can I optimize Omni E25's mopping performance? (3-4)
3. How to Ensure Optimal Obstacle Avoidance of E25? (5-6)
4. How to Achieve Better Carpet Cleaning of E25? (6-7)
5. How to ensure the Omin E25 can clean your whole house in single cleaning?
(7-8)

1. How can I optimize Omni E25's cleaning performance?


● Adjust Suction Level

Increasing the suction level can help the robot pick up debris more effectively.

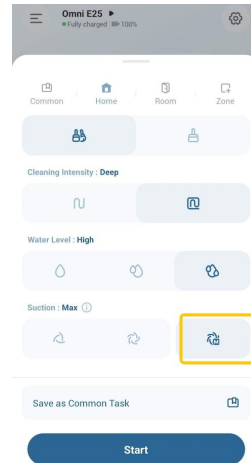

● Dirty Spot Cleaning

Enable the Dirty Spot Cleaning feature, the robot will detect stains like coffee spills and perform deep precision mopping. Please note: In vacuum-only mode, it will automatically switch to vacuum and mopping mode upon detecting dirt.

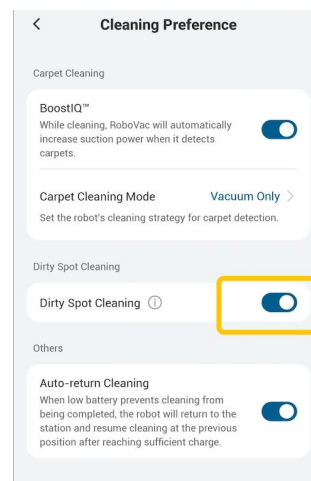

● Dirt Inspection

Enable the **Dirt Inspection** feature, the robot will auto-inspect the room after completing a full house cleaning to ensure no stains are left behind.

- **Accessories Maintenance**

For optimal performance, robot accessories (especially the roller, filter, dustbin) need to be cleaned and replaced regularly.

- **Keep Software Updated**

Regularly update the software and firmware to the latest version to ensure optimal performance and access to new features.

2. How can I optimize Omni E25's mopping performance?


If your home hasn't been deeply cleaned recently, the first time you use E25 may result in visible mopping streaks as it dislodges thick dust from under furniture. This is normal and will be reduced by multiple cleaning.

- **Cleaning solution**

Use eufy's official cleaning solution (Floor Cleaner) and enable the automatic cleaning solution dispenser.


- **Vacuum-only Mode**

Before the first mopping session with your E25, use the vacuum-only mode to remove dust and hair via the eufy Clean app.

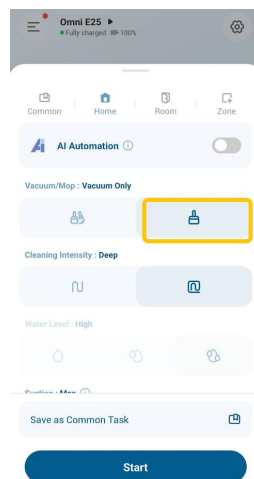


- **Adjust Water Level**

Adjust the appropriate water level in the app based on the floor type for more effective mopping. For stubborn stains, select the area and choose to mop it twice.

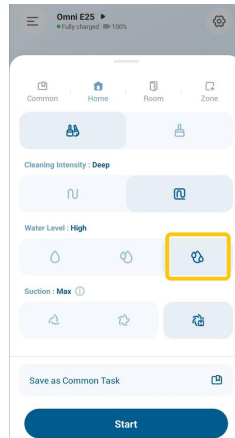

- **Dirty Spot Cleaning**

Enable the Dirty Spot Cleaning feature, the robot vacuum will detect stains like coffee spills and perform deep precision mopping.

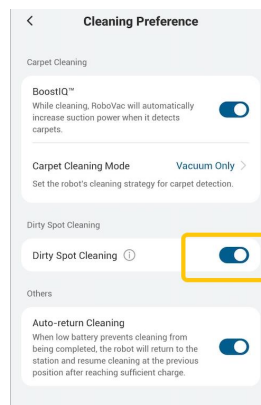

- **Dirt Inspection**

Enable the Dirt Inspection feature, the robot will auto-inspect the room after completing a full house cleaning to ensure no stains are left behind.

- **Accessory Maintenance**

Clean the roller mop and dirty water tank regularly to maintain optimal results.


- **Keep Software Updated**

Regularly update the software and firmware to the latest version to ensure optimal performance and access to new features.

3. How to Ensure Optimal Obstacle Avoidance of E25?

- **AI.See Settings**

Enable this feature to allow the robot to use AI algorithms for local object recognition and active obstacle avoidance during cleaning tasks. The robot's smart obstacle recognition and avoidance capabilities will continuously improve over time.

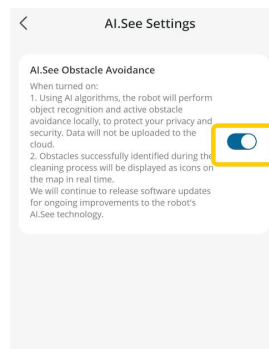


- **Clear the Floor**

Remove wires or other small-sized obstacles to prevent the vacuum from getting stuck.



- **Set No-Go Zones**

For areas like dark-colored stairs, walls, furniture, thin chair legs, furniture bottoms lower than 116mm, and carpets thicker than 26mm, set up no-go zones to avoid the robot getting stuck and to maintain cleaning performance.

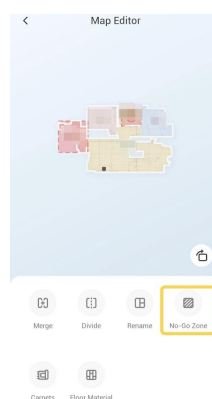

- **Secure Carpet Edges**

Fix the edges of thin carpets to prevent entanglement and ensure smooth operation.

- **Avoidance of Dark or Reflective Surfaces**

Remove black or highly reflective objects near thresholds to prevent confusion in E25's navigation system.

- **Keep Software Updated**

Regularly update the software and firmware to the latest version to ensure optimal performance and access to new features.

4. How to Achieve Better Carpet Cleaning of E25

- **Carpet cleaning Mode**


For short-pile carpets

Use the "Vacuum Only" mode. The device will automatically raise its mopping module to vacuum without mopping when detecting carpets to avoid wetting the carpet.

For medium- and long-pile carpets


Select the "Carpet Avoidance" mode. The device will avoid carpets entirely and skip cleaning them upon detection.

Note: Please note that dark carpets may not be detectable. Please set up a No-Go Zone.

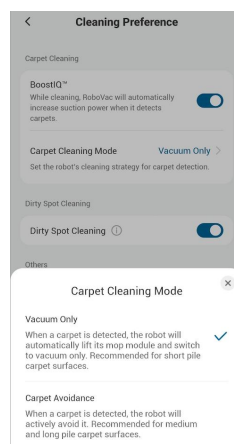

- **Boost IQ**

Enable the Boost IQ feature via the app, the robot will auto-increase the suction power when it detects the carpets to improve better cleaning performance.

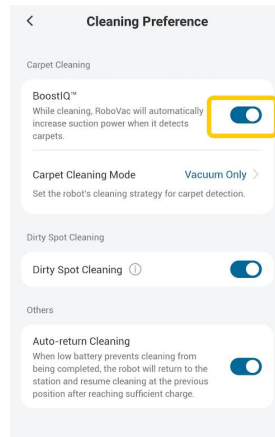

- **Keep Software Updated**

Regularly update the software and firmware to the latest version to ensure optimal performance and access to new features.

5. How to ensure the Omin E25 can clean your whole house in single cleaning?


- **Collect Small Objects**

Collect cords and other small-sized obstacles before using the Omin E25 to avoid it getting stuck.



- **Customizable No-Go Zones**

For carpets with a height exceeding 26mm, or those that are particularly light and thin, create no-go zones within the app. This prevents the robot from getting trapped or tangled.

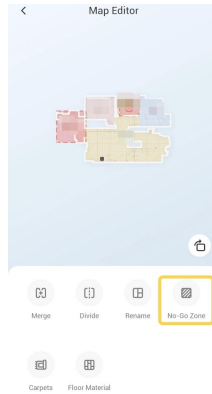


- **Carpet Edge Management**

If your carpet edges tend to curl, flatten or secure them to ensure smooth navigation for Omin E25.

- **Auto-return Cleaning**

If your home has a large area, please enable the auto-return cleaning function via the app.

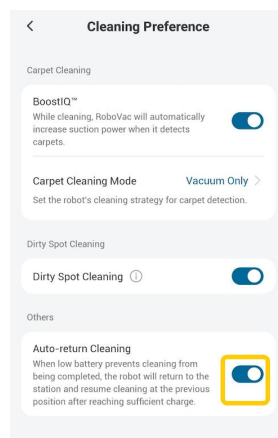

- **Firmware Upgrade**

Keep an eye on new firmware updates in the app and upgrade for better performance.

[1. About your Omni E25](#)

[1.1 What's in the Box](#)

[1.2 Overview](#)

[1.3 Button Controls](#)

[1.4 LED Indication](#)

[2. Preparing Your Omni E25](#)

[2.1 Prepare the Omni Station](#)

[2.2 Charge Your RoboVac](#)

[2.3 Download the App](#)

[2.4 Reset the Wi-Fi Connection](#)

[3. Using Your Omni E25](#)

[3.1 Important Tips Before Use](#)

[3.2 Mapping](#)

[3.3 Set Up No-Go Zone and No-Mop Zone](#)

[3.4 Schedule Cleaning](#)

[3.5 Select a Cleaning Mode](#)

[4. Using the Mopping System](#)

[5. Using RoboVac with Alexa, Siri, or Google Assistant Compatible Devices](#)

[6. Enabling / Disabling Child Safety Lock](#)

[7. Cleaning and Maintenance](#)

[7.1 Clean the Dustbin and Filter](#)

[7.2 Clean the Rolling Brush](#)

[7.3 Clean the Side Brush and CornerRover Arm™](#)

[7.4 Clean the Sensors, Cameras, and Charging Pins](#)

[7.5 Clean the Dirty Water Tank](#)

[7.6 Clean the Cleaning Tray](#)

[8. Troubleshooting](#)

[9. Specifications](#)

[10. Customer Service](#)

1. About your Omni E25

1.1 What's in the Box



Omni Station



Robot Vacuum Cleaner (RoboVac)



Detachable Base



Quick Start Guide



Floor Cleaner



Safety Sheet




Power Cord & Adapter

1.2 Overview



- 1 RGB Camera+ LED Light
- 2 Recharge Button and Power Button
- 3 Robot Cover
- 4 Navigation Lidar
- 5 Water Injection Port
- 6 Dirty Water Collection Port
- 7 Charging Contact Pins (x2)

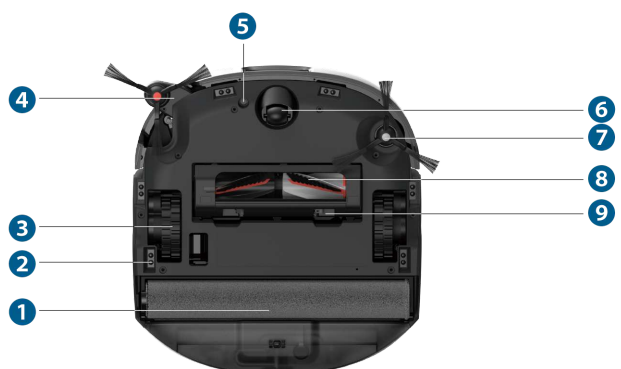

- 1 Roller Mop
- 2 Drop Sensors (x6)
- 3 Wheels (x2)
- 4 CornerRover Arm™
- 5 Carpet Detection Sensor
- 6 Swivel Wheel
- 7 Side Brush
- 8 DuoSpiral™ Rolling Brushes
- 9 Brush Guard

 
 
 


- 1 Dustbin
- 2 Handle
- 3 Release Latch
- 4 Filter













- 1 Detachable Base
- 2 Cleaning Tray
- 3 Disposable Dust Bag
- 4 Dirty Water Tank
- 5 Clean Water Tank
- 6 LED Indicator

1.3 Button Controls

	<ul style="list-style-type: none"> • Long press (3s): Power on or off • Short press: Pause / resume the current task when working
	<ul style="list-style-type: none"> • Short press: Return RoboVac to the Omni Station
	<ul style="list-style-type: none"> • Long press simultaneously (3s): Reset the Wi-Fi connection

1.4 LED Indication

You can see the status of RoboVac and Omni Station from the LED indicators.

	LED Indication	Description	Status
RoboVac		Pulsing white	Powered On
		Steady white	Working normally
		Breathing red	Low battery
		Steady red	<ul style="list-style-type: none"> • Low battery • Error (Please refer to in-app instructions for solutions)
		Flashing red quickly	Error (Please refer to in-app instructions for solutions)
Omni Station		The ring lights up in white	Powered on
		Steady white	Working normally
		Breathing white	Dust collection / Mop cleaning
		Steady red	Error (Please refer to in-app instructions for solutions)
		Off	Power disconnected

2. Preparing Your Omni E25


2.1 Prepare the Omni Station

1. Install the detachable base by pressing down both sides of it firmly.




- 💡 • Make sure the detachable base is seamlessly connected to the Omni Station, otherwise RoboVac will fail to return to the Omni Station smoothly.

2. Place the Omni Station in a location that has strong Wi-Fi signal and RoboVac can easily access. It is recommended to place it against a wall and on a hard, level surface. Then connect the power cord to the Omni Station and a wall outlet. When the Omni Station connects to AC power, the LED indicator of the clean water tank will light up.

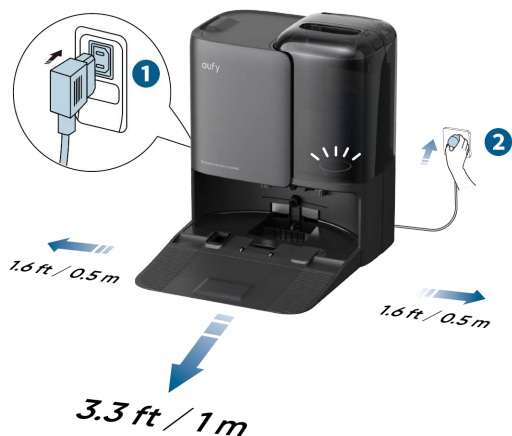

- 💡 • The recommended clearance on the illustration is a suggested value based on testing, to ensure RoboVac operates optimally, returns to the station for charging, and cleans the designated area effectively. You may adjust the clearance distance as necessary to suit the actual working environment of RoboVac.
- Always keep the Omni Station plugged in to ensure the infrared connection between RoboVac and the Omni Station is successful, otherwise RoboVac will not automatically return to it.

3. Remove the protective films on the clean water tank and dirty water tank.

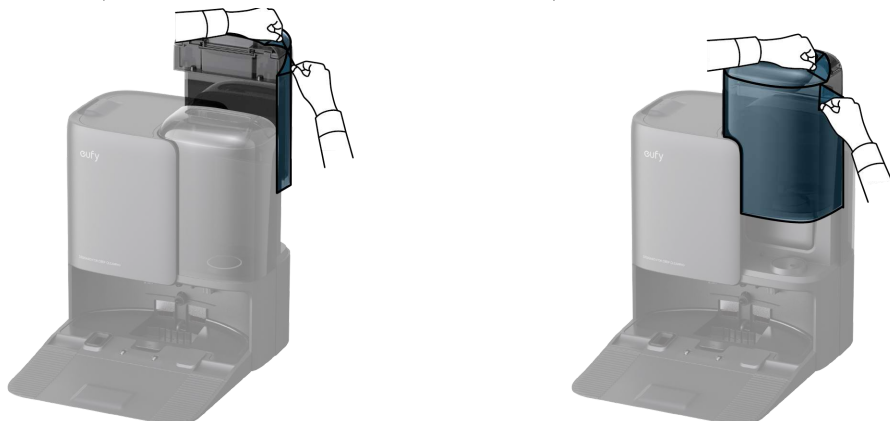

4. Peel off the cover of the Floor Cleaner and install it on the Omni Station.



5. Fill the clean water tank with water until it reaches the MAX line, then reinstall the clean water tank.




2.2 Charge Your RoboVac

1. Remove the foam blocks and all the protective films on RoboVac.




2. Attach RoboVac to the Omni Station. RoboVac will power on and start charging automatically.

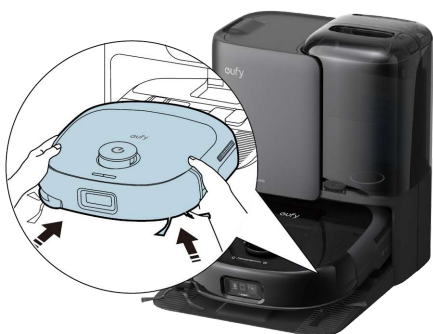

2.3 Download the App


To enjoy all the available features, it is recommended to download the app.

1. Download the app from the App Store (iOS devices) or Google Play (Android devices). You can also get the app by scanning the QR code printed on the Quick Start Guide (included in the package).

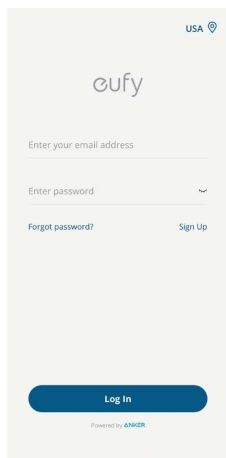

2. Open the app, create a new account or log into your own eufy account.

3. Tap the “+” icon to add the device.

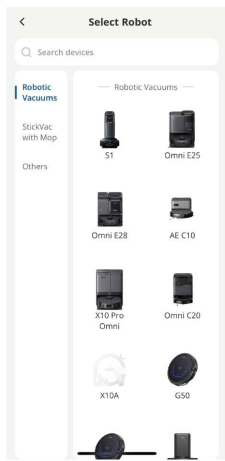

4. Follow the instructions in the app to set up the Wi-Fi connection.

2.4 Reset the Wi-Fi Connection

If you bump into issues when connecting your RoboVac to the eufy app, try to reset the Wi-Fi connection. Press and hold the power and recharge buttons simultaneously for 3 seconds until you hear a voice prompt.



You will hear a voice prompt when the Wi-Fi connection has been reset, and the LED indicators on RoboVac will quickly flash white. Now you can follow the instructions in the app to set up the Wi-Fi connection.

3. Using Your Omni E25

💡 • All UI images shown in this section are for illustration only, and they may be subject to change due to software updates. Please refer to the actual App interface for the most accurate information.

3.1 Important Tips Before Use


- Remove power cords and small objects (socks/toys/slippers/towels/weighing scales, etc.) from the floor that may entangle RoboVac.
- Fold tasseled edges of rugs underneath to prevent tangling RoboVac. Avoid cleaning high-pile rugs or rugs thicker than 0.83 in / 21 mm as they may cause RoboVac to malfunction.
- Before mapping, it is strongly recommended to place physical barriers in front of fireplaces and certain areas (i.e. air vents) that may cause damage to the robot if entered. For future use, set up virtual boundaries in the eufy app to prevent the robot from falling down staircases.
- Avoid vacuuming large amounts of water as it will potentially damage the device.
- RoboVac may climb on top of objects less than 0.83 in / 21 mm in height. Remove these objects if possible.
- Anti-drop sensors will prevent RoboVac from tumbling down stairs and steep drops in most cases. Sensors are less effective if dirty or used on carpeted / reflective floors. Place physical barriers or set a “No-Go” zone to block off areas where RoboVac may fall.

3.2 Mapping

This feature is designed to help your RoboVac efficiently learn the layout of your home, ensuring thorough and systematic cleaning. By creating a detailed floor plan, your RoboVac can navigate and clean with precision.

To maximize the efficiency and accuracy of the mapping process, please follow these steps:


- Open All Doors:** Ensure all doors within the cleaning area are open. This allows the robot to access and map each room seamlessly.
- Block Off Restricted Areas:** If there are specific zones you don't want the robot to enter, use physical barriers to block these areas. This can enhance mapping accuracy and prevent the robot from entering unwanted spaces. After the mapping is completed, you can remove physical barriers, and set up restricted areas to prevent the robot from entering those areas.
- Remove Obstacles:** Clear any objects, such as toys, cables, or small furniture, that might obstruct path or become entangled in its brushes. This helps RoboVac move freely and map the area without interruptions.
- Do Not Move the Base Station:** Once the floor plan is created, avoid relocating the base station. RoboVac relies on the base station as a reference point for navigation and mapping. Moving it may disrupt the accuracy of the floor plan.

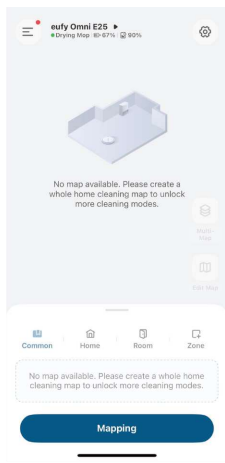

To start the mapping process, tap "Start" in the app.


3.3 Set Up No-Go Zone and No-Mop Zone

With the eufy app, you can set up a “No-Go Zone” or “No-Mop Zone” as a restricted area. This eliminates the need to use physical barriers, including boundary strips. This feature is only designed for dividing the cleaning zones, not for isolating hazardous areas.

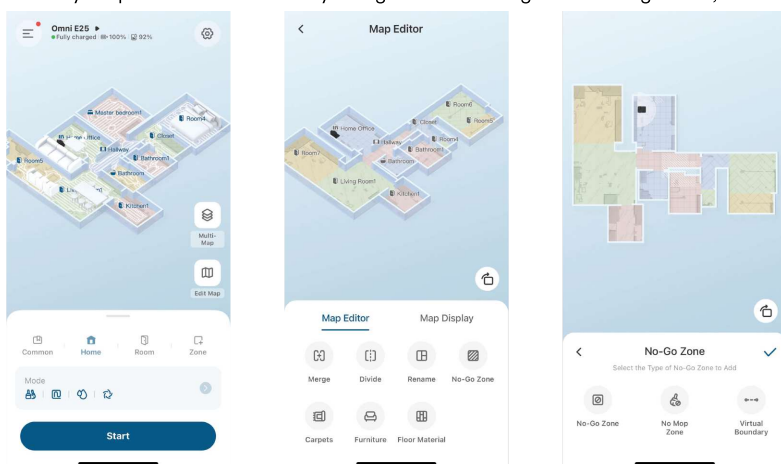

3.4 Schedule Cleaning

With the eufy app, you can schedule RoboVac to start cleaning at a particular time.

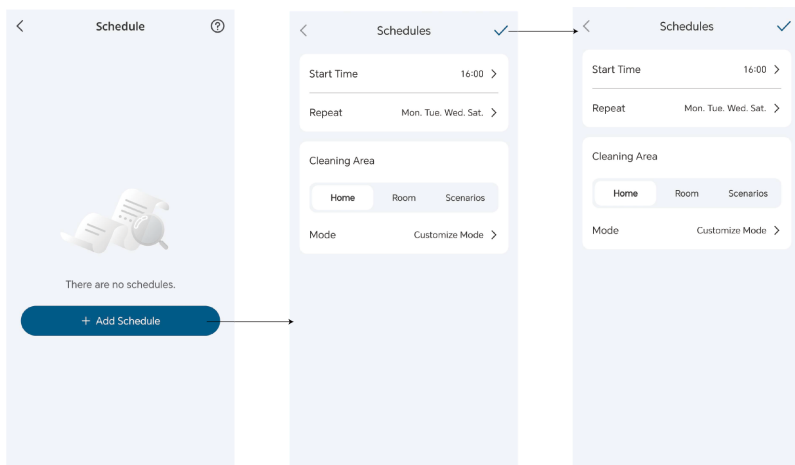


- 💡 You can set the time and customize cleaning schedules from Sunday to Saturday on the eufy app. This function is only available on the app.
- During the Do Not Disturb period, RoboVac will remain silent, with automatic dust collection and voice notifications disabled.

3.5 Select a Cleaning Mode

You can start / pause cleaning or select the desired cleaning mode via the eufy app.


In each cleaning mode, you can further customize the modes, duration, water level, suction level, and other settings.

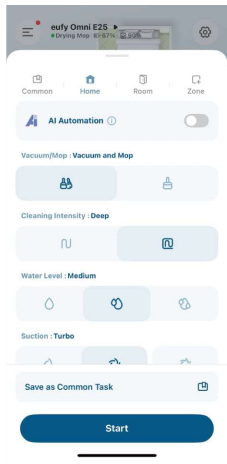


3.5.1 House Cleaning Mode

Tap "Start" in the eufy app to enable House Cleaning mode.

After startup, RoboVac moves from the Omni Station and automatically determines its cleaning route. When cleaning is finished, RoboVac automatically returns to the Omni Station.

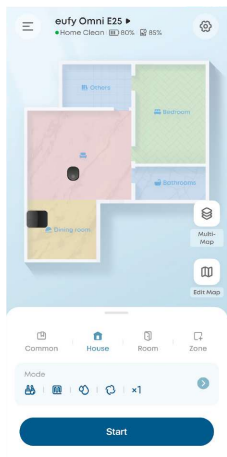


- To pause cleaning, tap "Pause" in the eufy app, or press the power button on RoboVac.

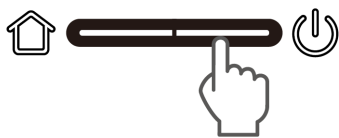

3.5.2 Room Cleaning Mode


In this mode, your house is automatically divided into several rooms for cleaning in the eufy app. You can also customize your room settings in the app. RoboVac will clean the selected rooms only and return to the Omni Station after cleaning.

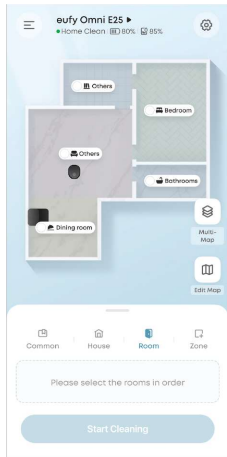

- Enable Room Cleaning mode only after RoboVac has created the map.
- It is recommended that RoboVac moves from the Omni Station to start room cleaning.

3.5.3 Zone Cleaning Mode

In this mode, you can set up a cleaning zone and customize its size in the eufy app, RoboVac will clean the selected zone only.

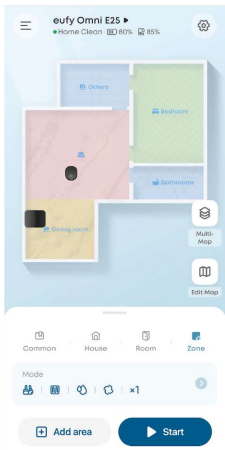

4. Using the Mopping System

1. Start cleaning. RoboVac will automatically vacuum and mop. During mopping, you can choose between three water levels via the eufy app.
2. To prevent the development of odors in the roller mop, be sure to activate the drying function after each mopping task. We strongly recommend setting the drying mode to "**Standard Drying**" every time to ensure optimal drying results and reduce unpleasant smells.
3. Regularly empty and clean the dirty water tank to prevent mildew or unpleasant smells. For instructions on how to clean the dirty water tank, refer to the "**Cleaning and Maintenance**" section in this User Guide.

5. Using RoboVac with Alexa, Siri, or Google Assistant Compatible Devices

Amazon Alexa or the Google Assistant are smart voice control devices that enable you to control RoboVac with your voice.

Before you start, make sure:

- RoboVac is attached to the Omni Station to ensure there is enough power.
- RoboVac is connected with the eufy app.
- To control your RoboVac with Siri, make sure you have an iPhone or iPad running a recent version of iOS.


To control RoboVac with Alexa, Siri, or Google Assistant:

1. Click on the top left corner of eufy app's main interface, then find "**Smart Integrations**" in the dropdown menu.
2. Follow the on-screen instructions to complete the setup.

6. Enabling / Disabling Child Safety Lock

Activate the child safety lock in the eufy app: **More Settings > Child Lock**

Once the child safety lock is enabled, all buttons will be locked to prevent children from damaging the device or accidentally getting hurt.

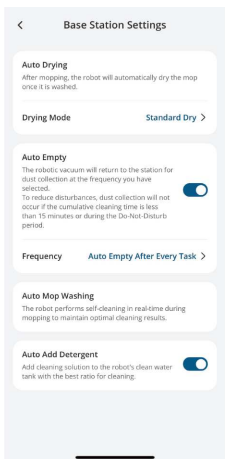

7. Cleaning and Maintenance

Prior to cleaning and maintaining, power off the device and unplug the power adapter. Any other servicing should be performed by an authorized service representative.

For optimal performance, follow the instructions below to clean and maintain E25 regularly. The cleaning and replacement frequency will depend on your usage habits.


For step-by-step instructions, check out our accessory maintenance video at: <https://www.youtube.com/watch?v=mu0r-H9dLyM>

Recommended Cleaning and Replacement Frequency

Components	Cleaning Frequency	Replacement Frequency
Dustbin	Once a week	-
Large Filter of Dirty Water Reservoir	Once a month	-
Filter Valve Assembly	-	Every 6 months
Dirty Water Tank of Omni Station	Empty and clean once a week (or when full)	-
Dustbag	-	Every 3 months (or when prompted)
Cleaning Tray	Every 2 weeks	-
Roller Mop	-	Every 3-6 months
Filter	Once a week	Every 3-6 months
Side Brush	Once a month (or when the side brush is tangled with hair / prompted by an error)	Every 3-6 months (or when visibly worn)
Brush Guard	Once a month	Every 3-6 months (or when visibly worn)
Rolling Brush	Once a month (or when the side brush is tangled with hair / prompted by an error)	Every 6 months
Sensors	Once a month	-
Charging Pins	Once a month	-
Swivel Wheel	Once a month	-

7.1 Clean the Dustbin and Filter


- 1 Open the top cover and take out the Dustbin.
- 2 Pull the release latch to open the cover. Take out the filter.
- 3 Empty the dustbin.
- 4 Tap the filter to remove dust.
- 5 Rinse the Dustbin and filter thoroughly with water.
- 6 Air-dry the Dustbin and filter completely before next use.
- 7 Place the filter back into the Dustbin.
- 8 Push the Dustbin back into the main unit.

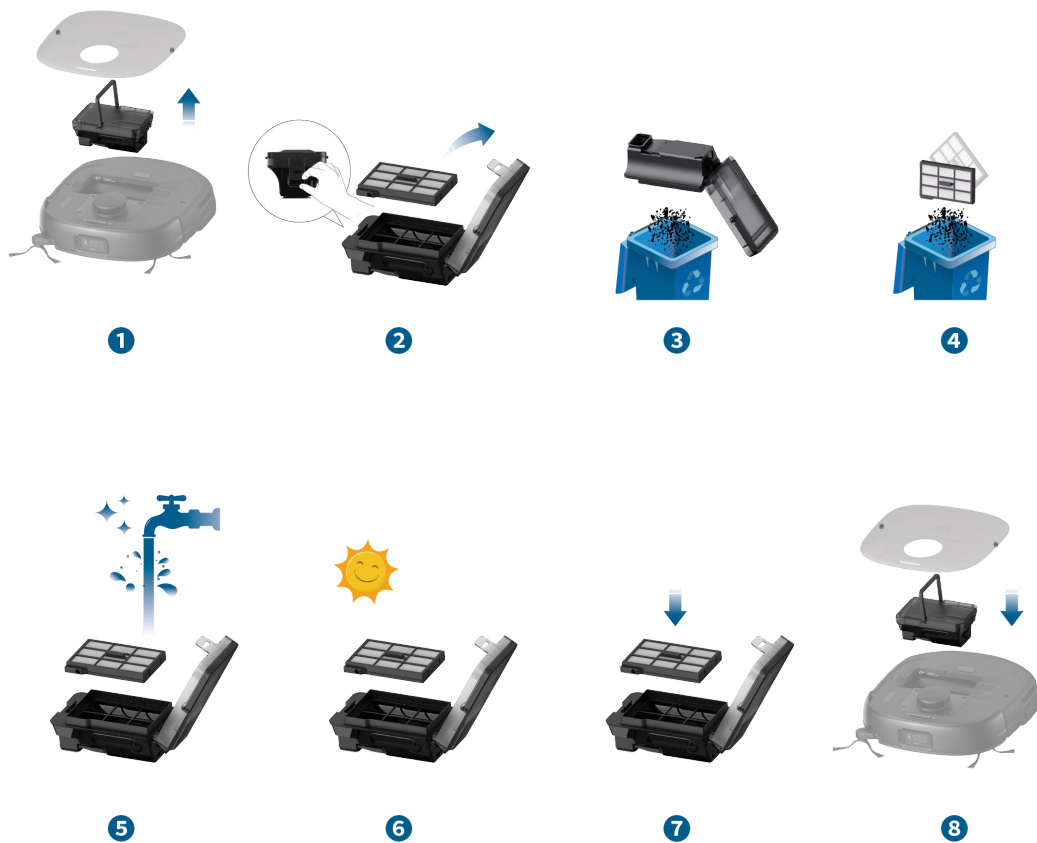

- ⚠ • Do not use the filter if it is not completely dry, otherwise it may affect the cleaning performance.
- Do not use a brush, hot water, or any detergent to clean the filter.

7.2 Clean the Rolling Brush


- ➊ Push the release tabs to unlock the brush guard.
- ➋ Push the side of one rolling brush inward and gently flip it up.
- ➌ Gently twist and pull out the rolling brush.
- ➍ Push the side of the other rolling brush inward and gently flip it up.
- ➎ Gently twist and pull out the other rolling brush.
- ➏ Rinse both rolling brushes and brush guard with running water. Air dry the rolling brushes and brush guard completely before next use.
- ➐ Reinstall one side of the rolling brush and snap it into place.
- ➑ Reinstall the other side of the rolling brush and snap it into place.
- ➒ Press down to snap the brush guard into place.

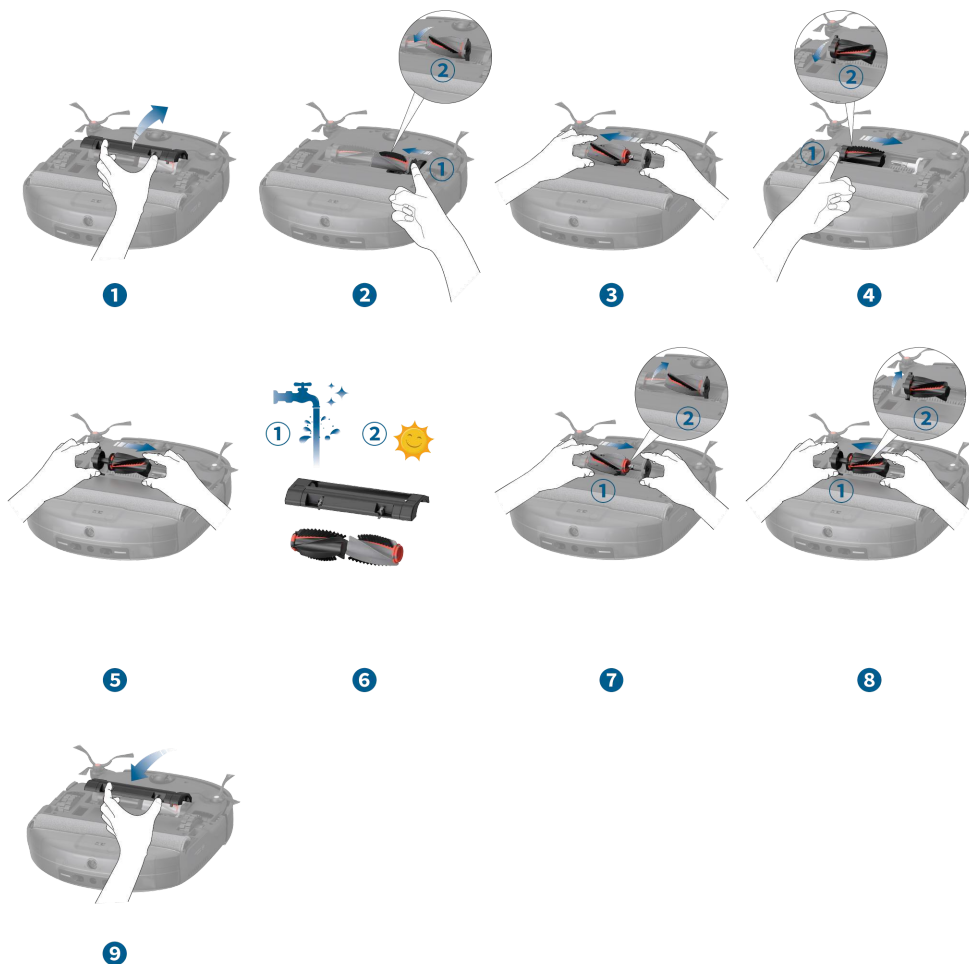

7.3 Clean the Side Brush and CornerRover Arm™

Foreign substances, such as hair, can easily get tangled in the side brush and CornerRover Arm™ , so it is best to clean them regularly.

- ① Remove the side brush.
- ② Carefully unwind and pull off any hair or substances attached to the side brush and CornerRover Arm™ .
- ③ Clean the side brush with water.
- ④ Air dry the side brush before next use.
- ⑤ Reinstall the side brush on the machine.

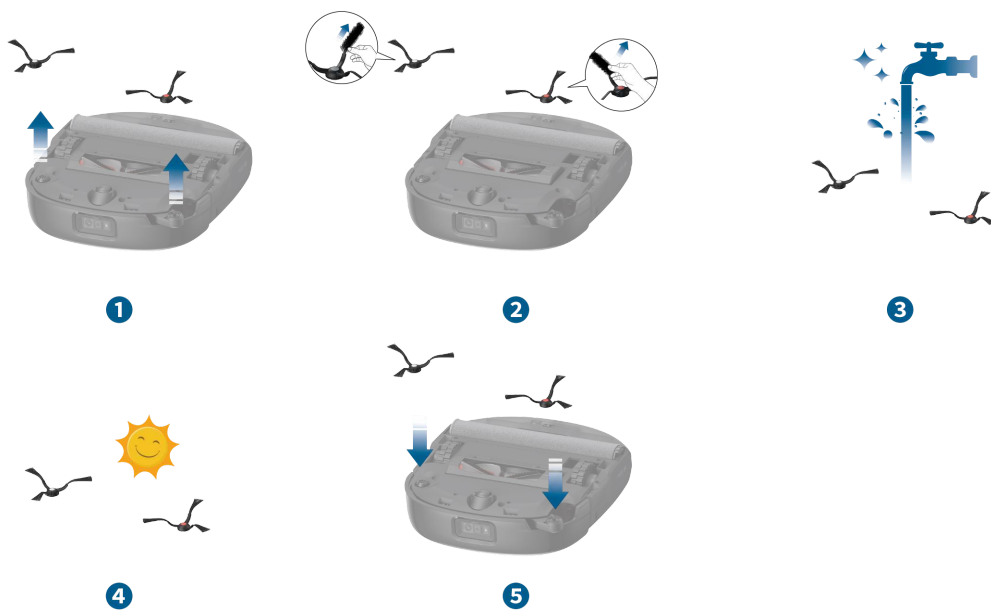

7.4 Clean the Sensors, Cameras, and Charging Pins

To maintain the best performance, clean the sensors and charging contact pins regularly.

- Dust off the sensors and charging contact pins using a soft cloth.



7.5 Clean the Dirty Water Tank

- 1 Remove the dirty water tank from the Omni Station.
- 2 Empty the dirty water tank.
- 3 Rinse the dirty water tank thoroughly with running water.



1



2



3

7.6 Clean the Cleaning Tray

- 1 Remove the cleaning tray from the Omni Station.
- 2 Rinse the cleaning tray thoroughly with water, and clean it with a brush.
- 3 Place it back into the Omni Station.



1



2



3

8. Troubleshooting

When an error occurs, please refer to the in-app instructions for solutions. If the problem persists, please contact support@eufy.com for help.

9. Specifications

	Dimensions	346*327*111mm
	Weight	11.46 lbs
	Battery	Li-ion 5200mAh DC14.6
	Input	20V~1.8A
	Cleaning Time	Vacuum Only Mode Quiet Suction: 218min Standard Suction: 126min MAX Suction: 124min Vacuum and Mop Mode Quiet Suction: 145min Standard Suction: 126min MAX Suction: 114min
	Charging Time	3.5h
	Clean Water Reservoir	120ml
	Dirty Water Reservoir	180ml
	Dimensions	369*461*436mm
	Weight	15.92 lbs
	Input	US/JP/KR/CA Version: 100–127V, 50–60Hz; EU/UK/AU/MEA Version: 220–240V, 50–60Hz;
	Power (Dry and Charge)	130W MAX
	Power (Dust Collection)	900W
	Clean Water Tank	2.5L
	Dirty Water Tank	1.8L
	Disposable Dust Bag Capacity	3L

💡 • As voltages vary across different countries and regions, we recommend purchasing the machine version specific to your location to avoid potential safety hazards and equipment damage.

10. Customer Service

Contact Us:

✉ support@eufy.com

💬 www.eufy.com

☎ (US/CA) +1 (800)994 3056
(UK) +44 (0) 1604 936 200
(DE) +49 (0) 69 9579 7960
(JP) +81 03 4455 7823

For video tutorials, FAQs, warranty policies, and more information, please visit <https://support.eufy.com/>
Hereby, Anker Innovations Limited declares that this device is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. For the Statement of Compliance, visit the website: <https://www.eufy.com/uk/psti-related>.

A. the equipment does not have a standby mode or other equivalent state in terms of energy efficiency requirements, power management function or the ability to deactivate wireless network connections mode;

B. the power consumption of the equipment is likely to be higher than other equipment models meeting these functional requirements.

1. Power consumption in standby mode: $\leq 0.5 \text{ W}$

2. Power consumption in standby mode with Display: $\leq 0.8 \text{ W}$

3. Power consumption in networked standby mode: $\leq 2 \text{ W}$

4. Power management: $\leq 20 \text{ min}$